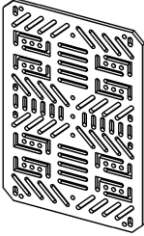 
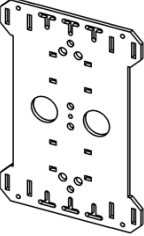 
 
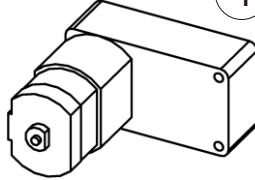 
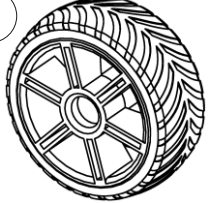 
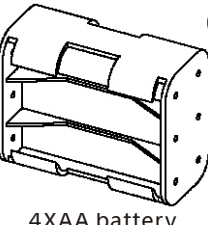 
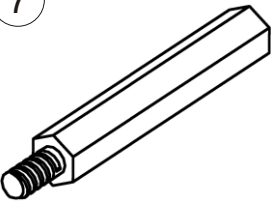 
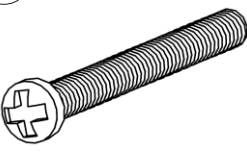 

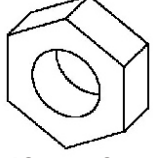 
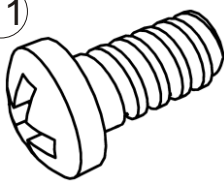 
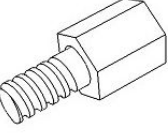 



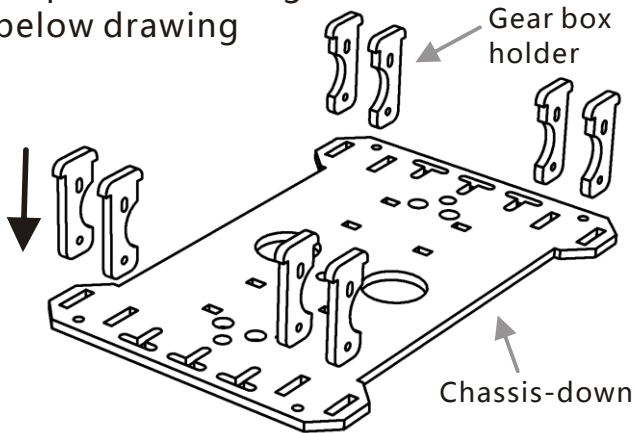 
4WD chassis Assembly Instructions

Part list:


 <p>1</p> <p>Chassis-up 1pc</p>	 <p>2</p> <p>Chassis-down 1pc</p>	 <p>3</p> <p>Gearbox holder 8pcs</p>	 <p>4</p> <p>Gearbox 4pcs</p>	 <p>5</p> <p>Wheel 4pcs</p>
 <p>6</p> <p>4XAA battery holder 1pc</p>	 <p>7</p> <p>L30 spacer 4pcs</p>	 <p>8</p> <p>M2.5*25 screw 8pcs</p>	 <p>9</p> <p>M2.5 nut 8pcs</p>	 <p>10</p> <p>M3 nut 8pcs (4pcs spare part)</p>
 <p>11</p> <p>M3*6 screw 8pcs (4pcs spare part)</p>	 <p>12</p> <p>M3*6 spacer 4pcs (spare part)</p>	 <p>13</p> <p>Battery holder tierap 2pcs</p>		

Assembly instruction:



Step 1: insert the gearbox holders as below drawing



 Step 2: place the gearbox as below drawing

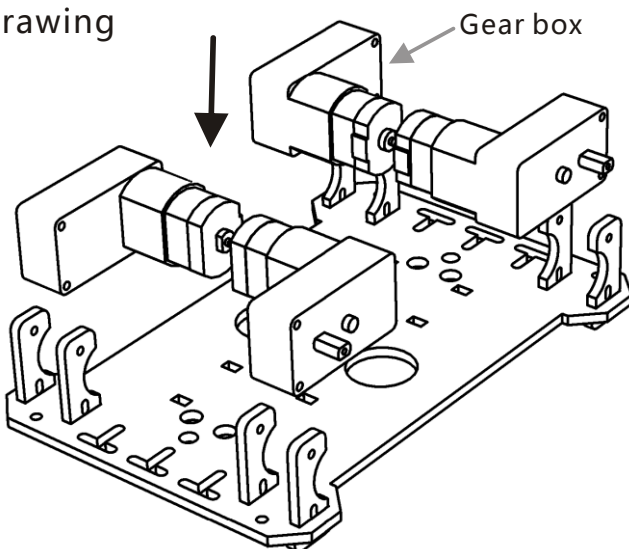

  
Step 3: assembly the gearbox

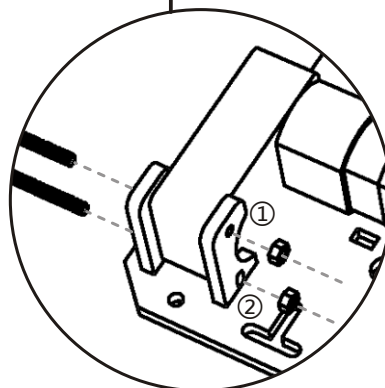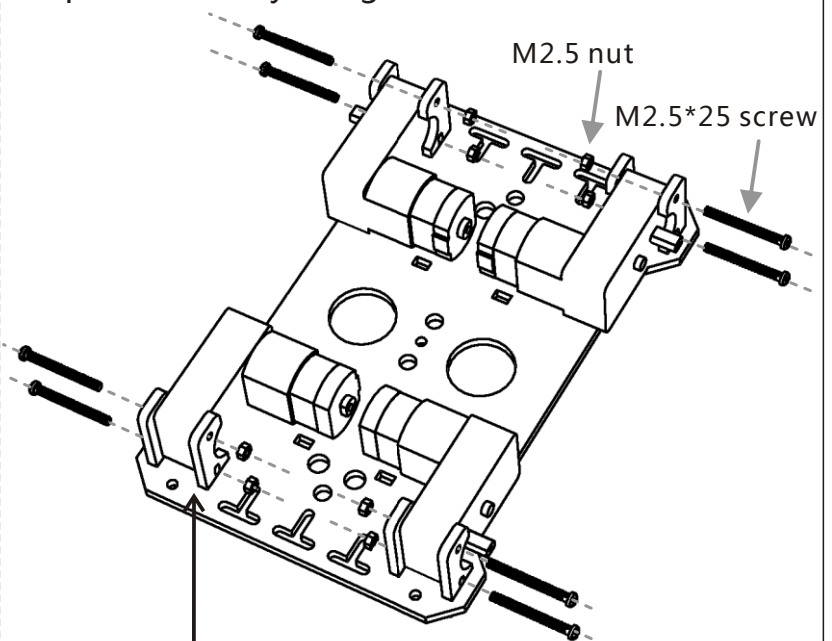


Firstly fix the upper screw holes (position 1)

Then fix the down screw holes (position 2)

 Step 4: assembly the wheel

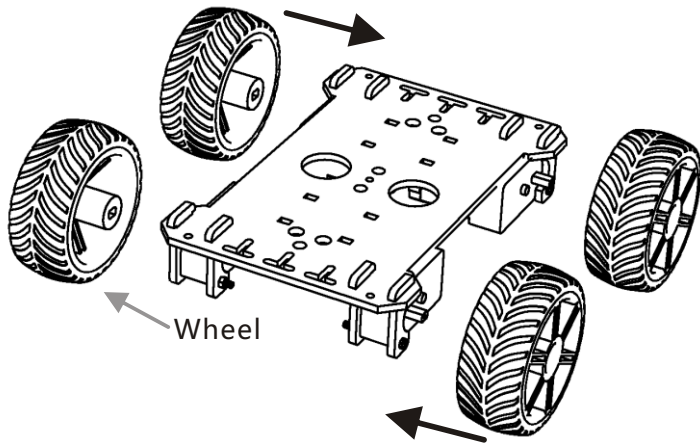

 Step 6: put the battery holder in place

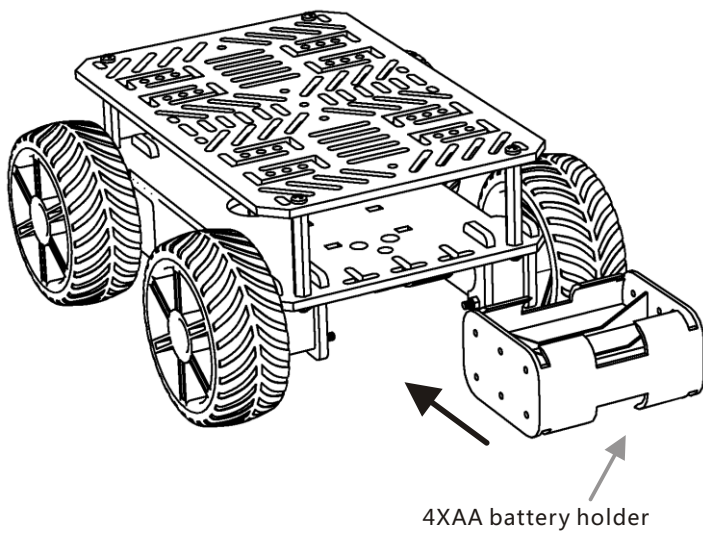

Step 5: Assembly the chassis-up

